TORRO .22

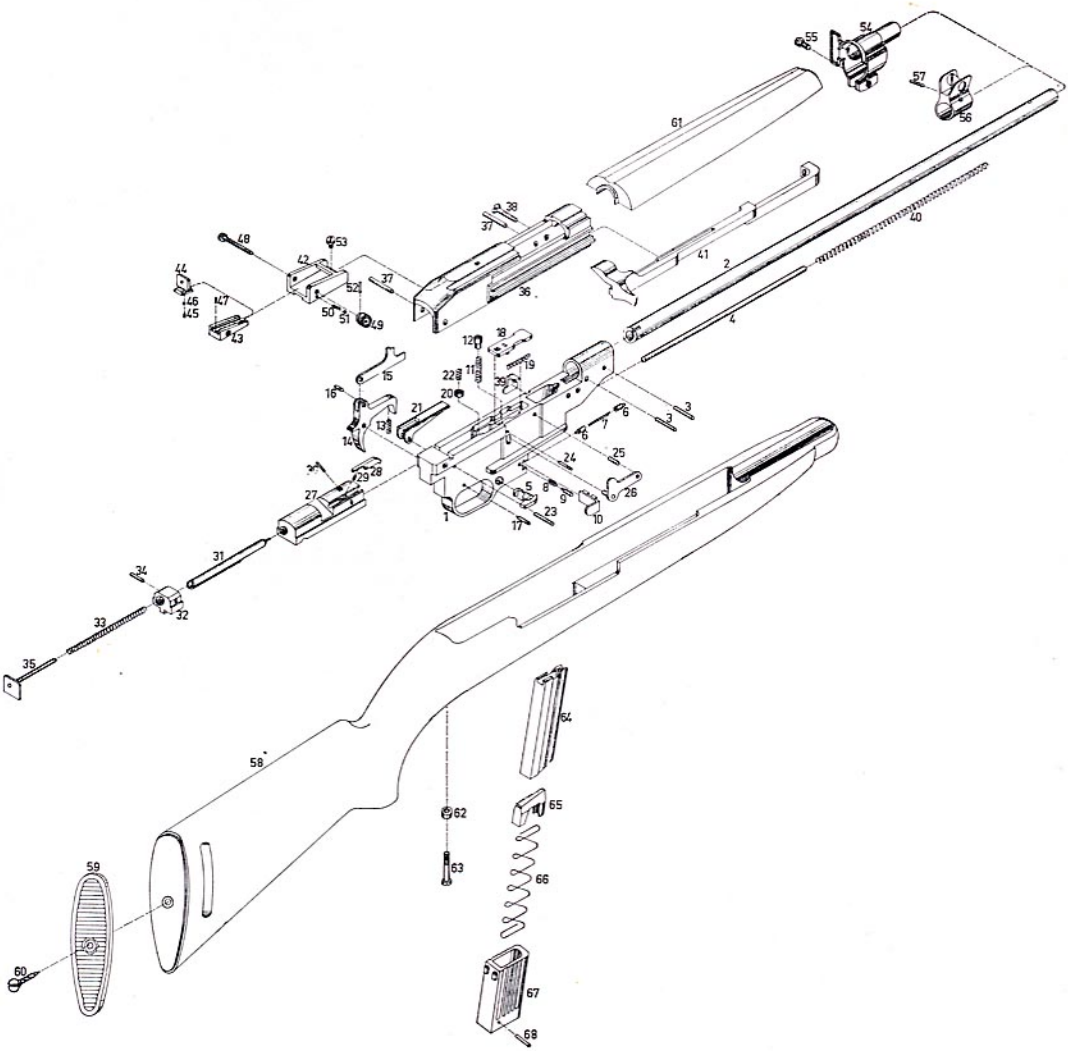

Please specify on order parts number and name.

Spare parts:

1 Trigger housing
2 Barrel
3 Barrel pin (2)
4 Operating slide spring guide
5 Safety lever
6 Safety detent plunger (2)
7 Safety detent plunger spring
8 Magazine catch spring
9 Magazine catch spring plunger
10 Magazine catch
11 Trigger bar spring
12 Trigger bar spring plunger
13 Trigger spring
14a Trigger assembly
14 Trigger
15 Trigger bar
16 Trigger bar pin
17 Trigger pin
18 Sear release plate
19 Sear release plate spring
20 Sear spring plunger
21 Sear
22 Sear spring
23 Sear holding pin
24 Sear release plate pin
25 Sear release pin
26 Sear release
27a Bolt assembly
27 Bolt
28 Extractor
29 Extractor spring
30 Extractor pin
31 Firing pin
32 Firing pin piece
33 Firing pin spring
34 Firing pin piece pin
35 Recoil plate
36 Receiver
37 Trigger housing retaining pin (2)
38 Receiver screw
39 Ejector
40 Operating slide spring
41 Operating slide
42a Rear sight assembly
42 Rear sight base
43 Rear sight ramp
44 Rear sight sliding aperture
45 Rear sight sliding spring
46 Rear sight sliding ball
47 Rear sight ramp pin
48 Rear sight windage screw
49 Rear sight windage knob
50 Windage stop spring
51 Windage stop ball
52 Windage stop pin
53 Rear sight base screw
54 Front band assembly
55 Front band screw
56 Front sight assembly
57 Front sight pin
58a Stock assembly
58 Stock
(polished beech or oiled walnut)
59 Butt plate
60 Butt plate screw
61 Handguard assembly
62 Rear guard screw plunger
63 Rear guard screw
64a Magazine assembly
64 Magazine tube
65 Magazine follower
66 Magazine spring
67 Magazine tube holder
68 Magazine tube holder pin

Instruction of use:

Safety on the right side of the trigger guard is engaged when safety lever points down (white point). To disengage rotate safety lever forward (red point).

To load, engage safety, and insert the filled magazine into magazine opening, making sure magazine snaps into place. Hook over operating slide handle, pull operating slide to the rear and release it (the closing of the bolt must be done by spring pressure).

Disengage safety and pull the trigger.

Bolt remains open when magazine is empty. Push magazine catch to the left and remove magazine. Now bolt closes.

Attention: Never point the weapon at anyone even when unloaded, any weapon is dangerous.

Disassembly Procedure:

Loosen front band screw (55), remove rear guard screw (63), slip front band (54) forward on barrel, and lift wooden handguard (61) free.

Separate barrel and receiver assembly from stock.

Push both trigger housing retaining pins (37) out of receiver and remove receiver screw (38).

Lift receiver (36) free (push the bolt downward with finger tip).

Pull operating slide (41), operating slide spring (40), and operating slide spring guide (4) forward.

Raise recoil plate (35) and remove to rear firing pin spring (33), firing pin piece (31a) together with bolt.

Technical data

caliber	.22 L.R.
mechanism type	semi-automatic, blowback
barrel	450mm (18"), grooved for scope mounting
sights	aperture rear sight adjustable for windage and elevation, blade front sight with strong protector, distance between sights 530mm (20.1/8"), adjustable range 25/50/75/100m
stock	with handguard, dull polished beech wood or walnut
magazine	10 rounds / 15 rounds
safety	safety lever on the right side of the trigger guard
over-all length	900mm (35.1/2")
weight	2.550 kos (5.6 lbs)